

ИНСТРУКЦИЯ ПО СБОРКЕ ДУШЕВОГО ОГРАЖДЕНИЯ

NG-1008-14QMT / QBLACK / QT / QKL

NG-1009-14QMT / QBLACK / QT / QKL


NG-1010-14QMT / QBLACK / QT / QKL












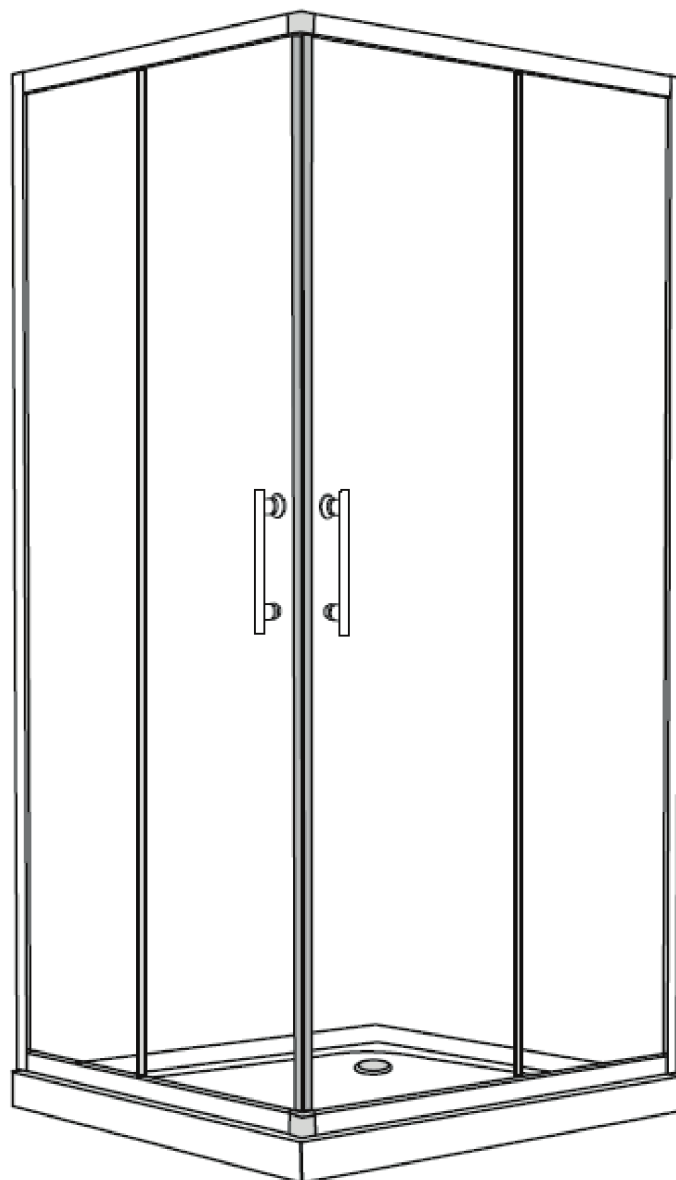


NG-1012-14QMT / QBLACK / QT / QKL

NG-1018-14QMT / QBLACK / QT / QKL


NG-1118-14QMT / QT

NG-1129-14QMT / QT





1		ST4X30	X8
2		Φ6x30	X8
3		ST3. 5x25	X8
4		ST4X12	X10
5		ST4X12	X12
6			X4
7			
8			X8
9			X4
10			X2
11			X2
12			X2
13			X8
14			X2
15			X2



ИНСТРУКЦИЯ ПО УСТАНОВКЕ ПОДДОНА*

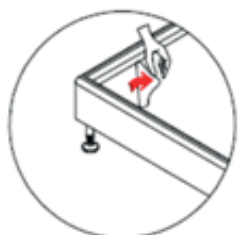

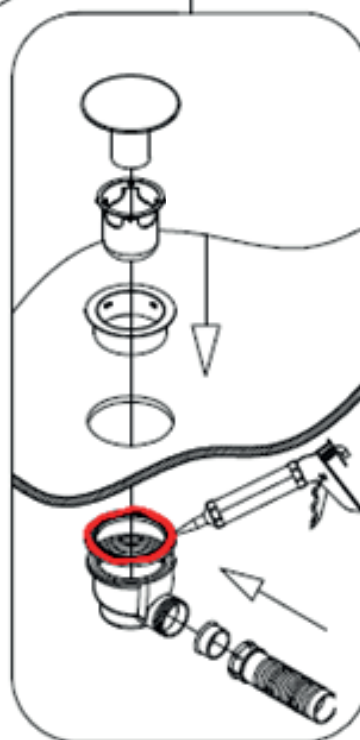
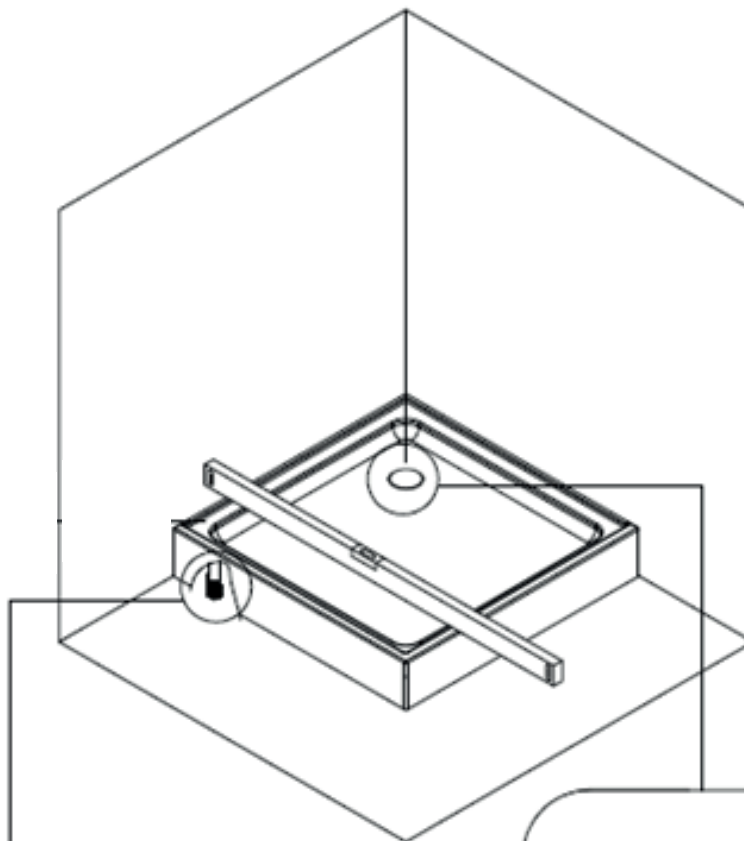






удалите защитную пленку

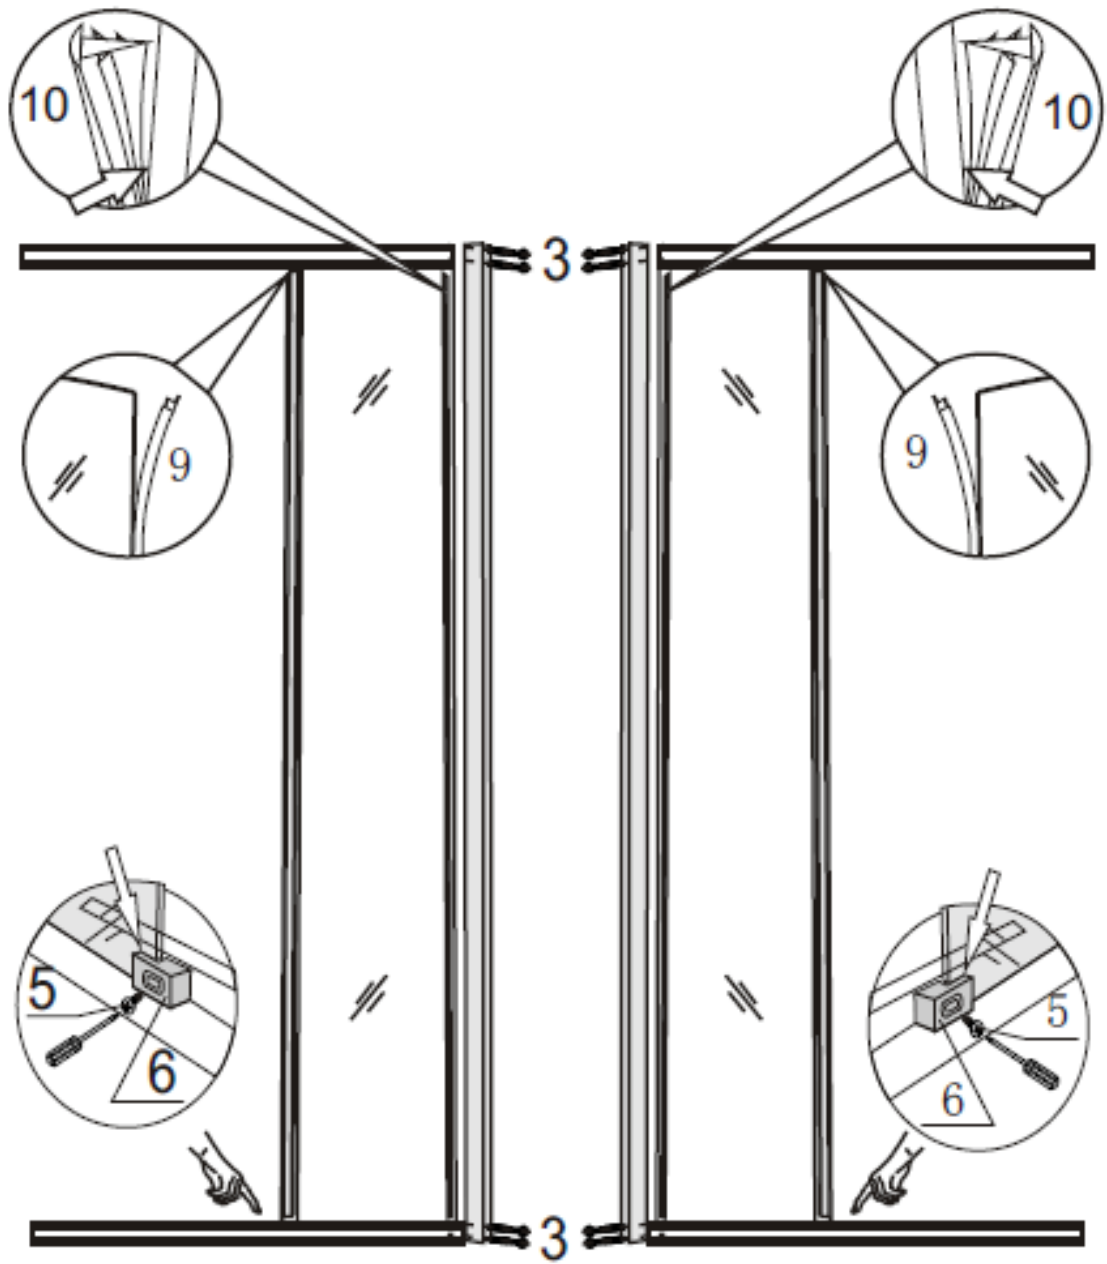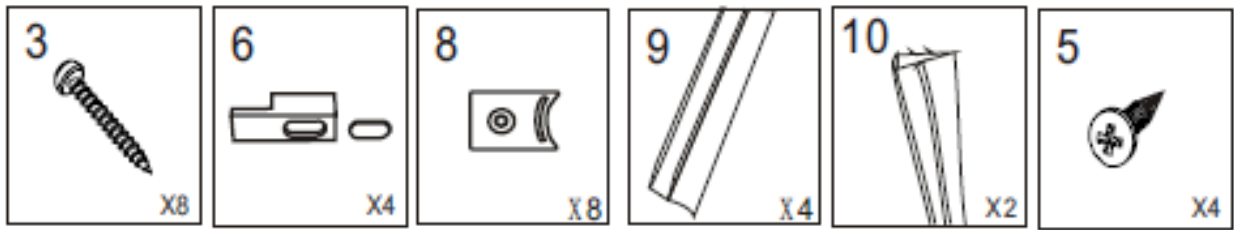


* поддон приобретается отдельно

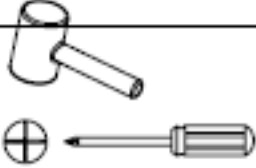


 <p>Ø3mm</p>	<p>4</p>  <p>X4</p>
	 <p>15</p> <p>X2</p>

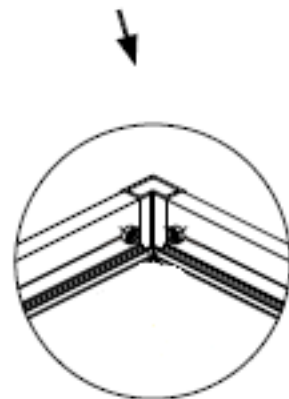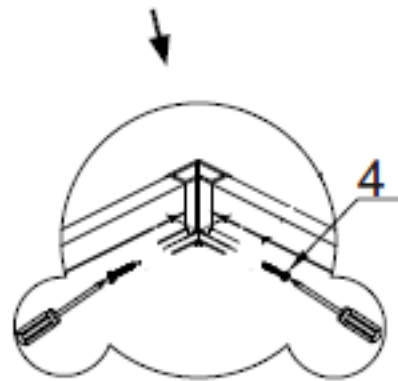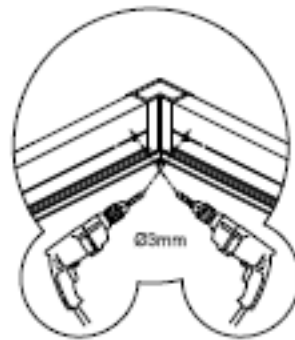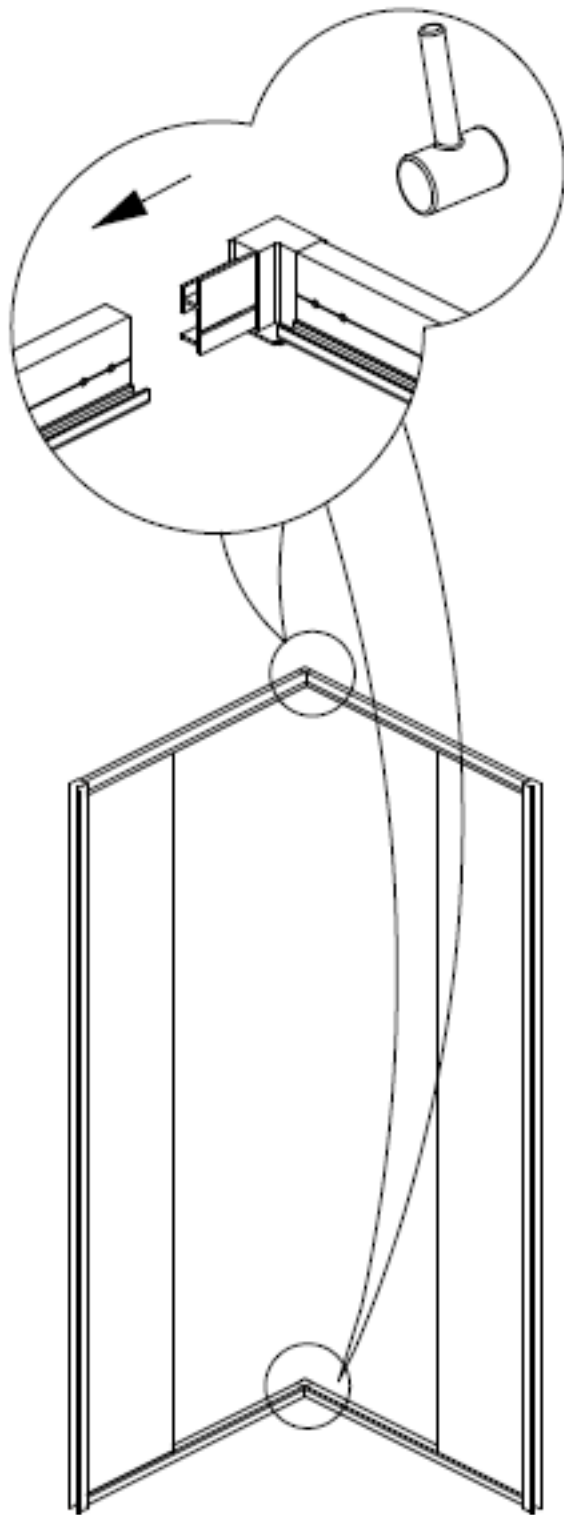

14

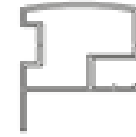



X2

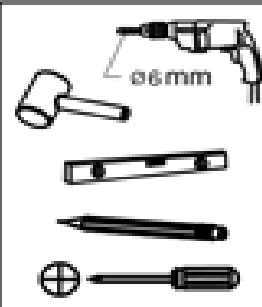


X8




X8

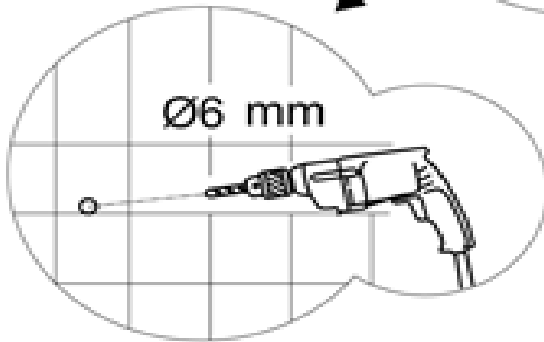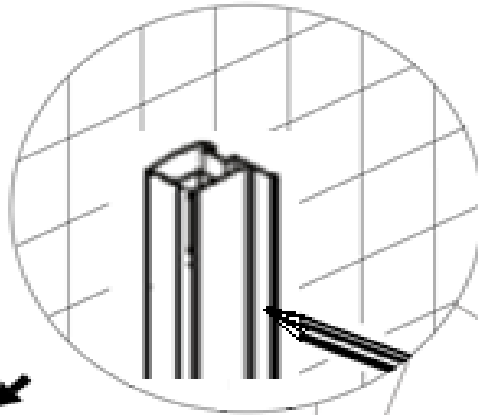


Ø6 mm

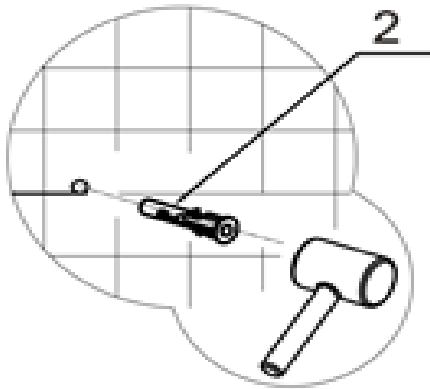

2

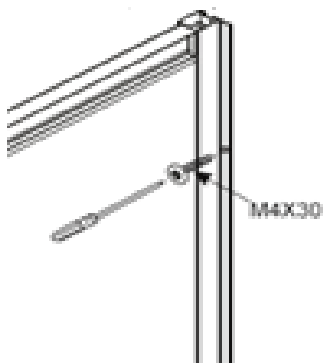

M4X30

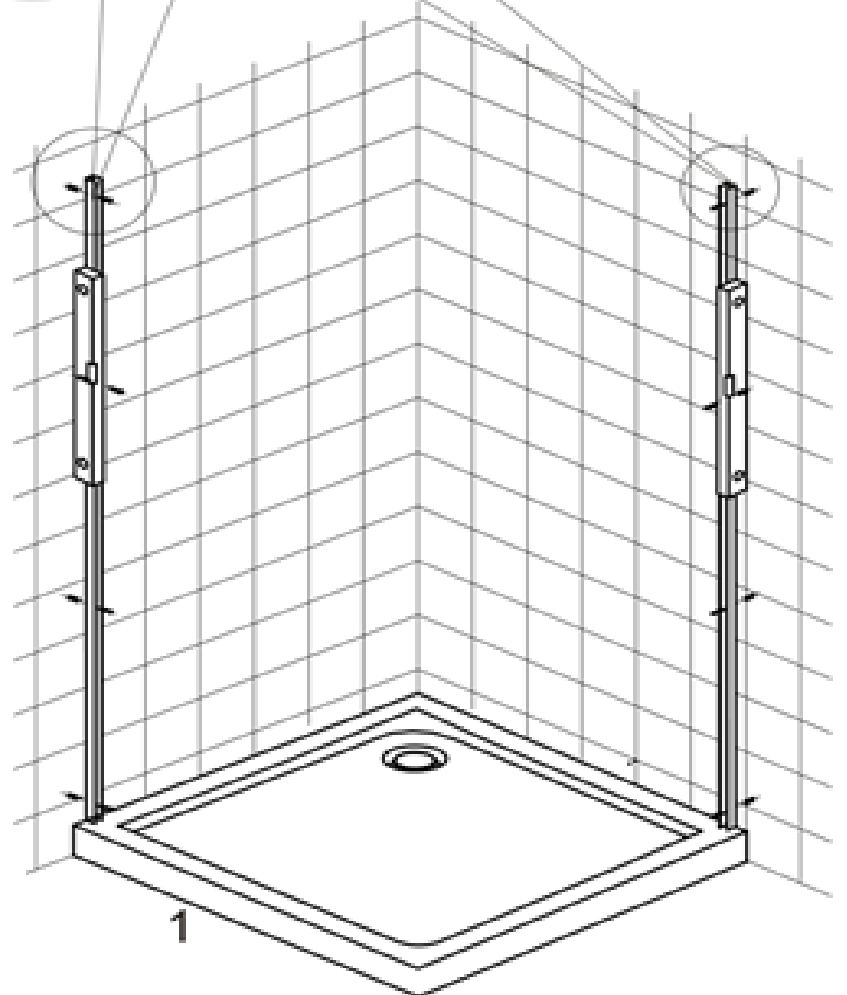

1

